

CLEANING: Clean Nebulizing glass regularly - every few weeks, or if after several fillings, the oil starts to thicken. The injector (curved capillary) can clog if traces of essential oil are allowed to sit in the glass for long periods of time. Cleaning is also recommended when changing from one oil to another.

The glass can be cleaned with liquid detergent and hot water or with denatured alcohol. Most of the oil can be removed by vigorously swishing with liquid detergent and hot water. Take care not to strike the glass against anything. Rinse well. If residues remain, try diffusing a small amount of denatured alcohol in the nebulizer.

Diffusing alcohol for a few minutes on a regular basis can eliminate any potential buildup in the curved capillary. Always empty any remaining alcohol from the nebulizer and run it empty for a few minutes to dry.

Manufacturer's Warranty

A 30-day warranty is given on the nebulizer glass and a one-year warranty is given on the pump. Warranty does not include breakage of the nebulizer glass or oil spilled into or onto plastic housing. For replacement parts please contact your retailer or the address below. If this diffuser does not appear to be performing properly, please contact Amrita's Customer Service for assistance.

**FAILURE TO FOLLOW THE OPERATING INSTRUCTIONS
WILL VOID THE WARRANTY**

Enjoy!

Amrita Aromatherapy

1900 C West Stone Avenue ♦ Fairfield ♦ IA 5255.


Customer Service: USA 1.800.410.9651 International: 1.641.472-9136

Fax: 1.641.472.8672 ♦ E-mail: customers@amrita.net ♦ www.amrita.net



Harnessing the healing power of plants

OPERATING INSTRUCTIONS for the NEBULIZING AROMA DIFFUSERS

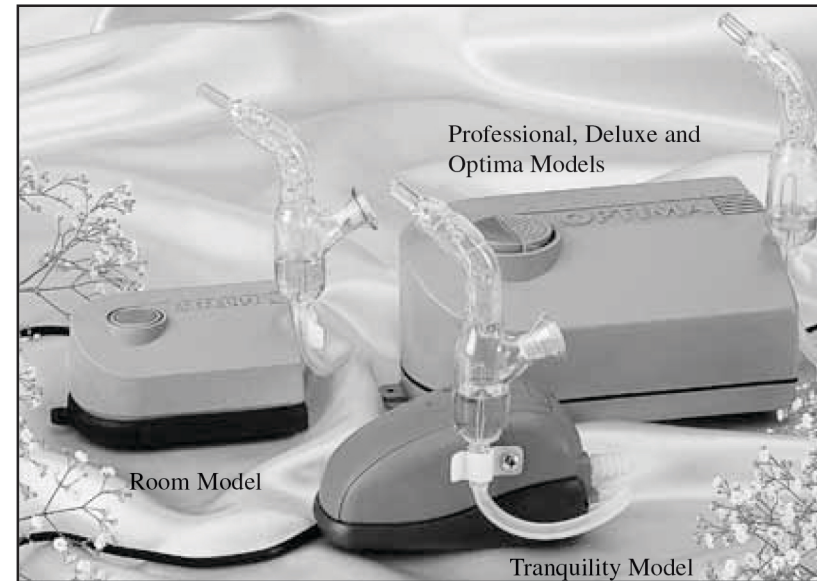

Amrita Nebulizing Aroma Diffusers



Organic and Wildcrafted Essential Oils

Congratulations!

You have just purchased the original Amrita Nebulizing Aromatic Diffuser. Aromatherapy professionals have considered the Amrita Nebulizing Aromatic Diffuser the premier design for aromatic diffusion since its introduction over 18 years ago because of its very fine dispersion, economical use of essential oils, handiness and ease of operation.

Assembly and Operating Instructions

1. Carefully unwrap the glass nebulizer tube (it is delicate) and the attached silicon tubing. Protect it from falling or being hit or chipped.
2. Remove the cork carefully.
3. Position the glass tube so that the funnel opening faces upward. Carefully pour undiluted authentic essential oil into the funnel so that the drops fall away from the tips of the two capillaries. The curved capillary pulls the oil up from the chamber. The straight capillary delivers air which meets with the oil. **It is very important that oil is not dripped into the air capillary; otherwise the oil will drip down through the tube and the diffuser will not function properly.** A minimum of 10 drops of essential oil is necessary for proper diffusion; however using 25 – 40 drops is a comfortable operating level. **Do not fill past the horizontal bar near the bottom of the nebulizer which joins the two capillaries together.**
3. Insert cork carefully and firmly.
4. Set the glass tube in the clip on the pump so that it is upright. Position it so the diffuser tip (where scented air will emerge) faces away from the pump housing.
5. Insert the free end of the silicon tubing into the pump's air outlet. Make sure it is firmly in place, and that the tubing is not bent or crimped.
6. Plug into an electrical outlet.
7. To Refill: Remove the nebulizer glass and tubing from the pump to avoid accidentally pouring oil down the silicon tubing and damaging the pump. Follow directions 2 – 6 above.

Instructions Specific to Each Diffuser Model

Room Model: Depending on room size, 10 minutes should be enough to fill the room with a delightful fragrance. However, the diffuser may be used over several hours. (Formerly known as the “Slumber Model”.)

Tranquility Model: Regulate the output by turning the white volume control knob counter-clockwise to increase air pressure, clockwise to decrease. If oil begins to condense and drip from the diffuser tip, reduce to a lower setting.

Optima Model: Depending on room size, a few minutes on high will be enough to fill the room with fragrance. Do not run this diffuser on high for more than 3 - 5 minutes. If oil begins to condense and drip from the diffuser tip, reduce to a lower setting. On low, the diffuser can be used over several hours. Regulate the output by turning the dial.

Deluxe Professional Model with Interval Timer: A Deluxe Professional will diffuse for seven minutes then stop pumping air for a twenty-three minute rest phase. This feature will fill the room with fragrance in addition to providing a more profound therapeutic treatment. You may run your Deluxe Professional for any length of time desired. If oil begins to condense or drip from the diffuser tip, reduce to a lower setting. Regulate the output by turning the circular green and tan dial on the top of the pump.

Important Notes to Read Before Using Diffuser

AVOID DRIPPING: Avoid dripping oil on the diffuser housing. Over-filling can cause the diffuser tip to drip. If oil should drip accidentally, wipe spills immediately with a clean paper towel. Many essential oils will corrode or dissolve plastic, adhesives and some furniture finishes.

It is the sole responsibility of the consumer to maintain the original appearance of their aroma diffuser.

PREVENT CLOGGING: Use only recommended pure essential oils. The following oils will clog the nebulizer and may cause damage to the pump - all carrier or massage type oils, ANY thick or resinous oils such as Myrrh, Sandalwood, Benzoin, Blue Camomile, Patchouli, or Vanilla.

Using these kinds of resinous oils will void warranty.